


1) LAYOUT DIAGRAM

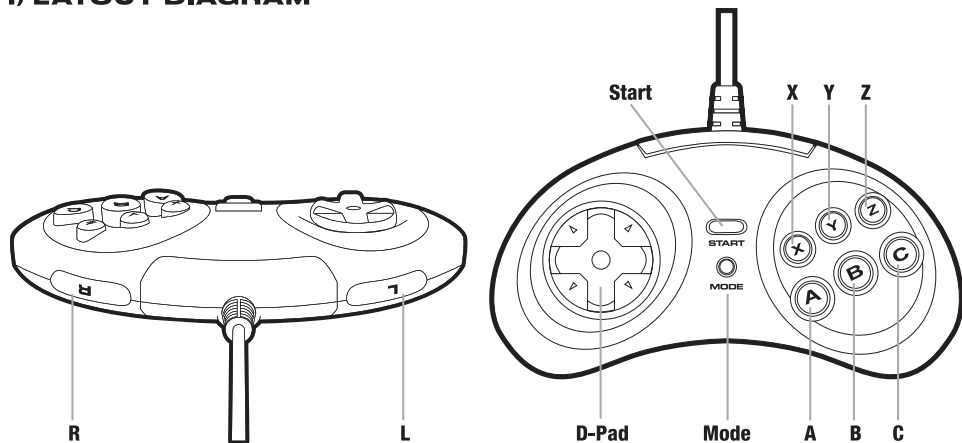

2) DEFAULT BUTTON MAPPING

Mega Drive	D-Input	X-Input	PS3®	Mac®	Switch
Up ↑	Up ↑	Y-Axis ↑	Up ↑	Y-	Up ↑
Right →	Right →	X-Axis →	Right →	X+	Right →
Down ↓	Down ↓	Y-Axis ↓	Down ↓	Y+	Down ↓
Left ←	Left ←	X-Axis ←	Left ←	X-	Left ←
A	2	A	●	3	A
B	3	B	×	2	B
X	1	X	▲	4	X
Y	4	Y	■	1	Y
C	5	RT	R2	8	ZR
Z	6	LT	L2	7	ZL
L	7	LB	L1	5	L
R	8	RB	R1	6	R
Mode	9	Select	Share/Select	9	-
Start	10	Start	Options/Start	10	+
Start +A	Guide	Guide	-	13	Home

Switch Macros	
Hold for 5 seconds	Mode Enabled
↑ + Start	D-Pad input
← + Start	Left Joystick
→ + Start	Right Joystick
↓ + Start	Swap A-B & X-Y

retro-bit®

SEGA®



8 Button Arcade Pad with USB®

For PC, Mac®, Steam®, PS3®, and Switch

INSTRUCTION MANUAL
MANUAL DE INSTRUCCIONES
GUIDE D'UTILISATION

EU



Retro-bit is a registered trademark of Kool Brand, LLC. Sega and Sega logo are registered trademarks of Sega Holdings, Ltd. or its affiliates. Mac is a registered trademark of Apple Inc. Steam is a registered trademark of Valve Corporation. PS3 is a registered trademark of Sony Interactive Entertainment Inc. USB is a registered trademark of Universal Serial Bus Implementers Forum, Inc. Nintendo Switch is a registered trademark of Nintendo of America Inc. All other mentioned trademarks are either trademarks or registered trademarks of their respective owners. This product is officially licensed by Sega of America, Inc. This is a Retro-Bit product and is not endorsed, manufactured or distributed by Nintendo. © 2012 Kool Brands, LLC.

EN INSTRUCTION MANUAL

- Swap between D-Input and X-Input by holding the **Start + B** buttons for 5 seconds
- Compatible with PC, Mac®, Steam®, PS3® and Switch
- On Steam®, switching to X-Input may solve D-Pad issues (may differ between titles)

DE BEDIENUNGSANLEITUNG

- Bei USB®, wechsle zwischen dem Steuerkreuz und der X-Eingabe, indem du die Tasten **Start + B** 5 Sekunden lang gedrückt hältst.
- Mit PC, Mac®, Steam®, PS3® und Switch kompatibel
- Auf Steam® kann der Wechsel zur X-Eingabe Probleme mit dem Steuerkreuz beheben.

FR GUIDE D'UTILISATION

- Pour USB®, alterner entre configuration D et X en maintenant les touches **Start + B** pendant 5 secondes.
- Compatible avec PC, Mac®, Steam®, PS3® et Switch
- Sur Steam®, changer en configuration X pourrait résoudre les problèmes de croix directionnelle.

ES MANUAL DE INSTRUCCIONES

- Para USB®, intercambia la entrada D y la entrada X manteniendo pulsados los botones **Start + B** durante 5 segundos.
- Compatible con PC, Mac®, Steam®, PS3® y Switch
- En Steam®, cambiar la entrada X puede resolver los problemas con la cruceta.

IT MANUALE DI ISTRUZIONI

- Per USB®, passa dalla configurazione D alla configurazione X tenendo premuto **Start + B** per 5 secondi.
- Compatibile con PC, Mac®, Steam®, PS3® e Switch
- Su Steam®, passando alla configurazione X si potrebbero risolvere i problemi della croce differenziale.



For more information, please visit
www.retro-bit.com